

Konica USB Printing

Technical Services Group

Please use this guide on printing a file from a USB directly on your Konica machine:

Note:

Any of PDF, Compact PDF, JPEG, TIFF, XPS, Compact XPS, OpenXML (.docx/.xlsx/.pptx), and PPML (.zip) format files can be printed out. You can also print out encrypted PDF, searchable PDF, and outline PDF files. A 1200-dpi resolution file is printed in the 600 × 600-dpi resolution.

Step 1

1. Insert a USB memory device into the USB port (close to the front panel) of the machine.



 
NOTICE

- ❖ When this machine is starting up, do not insert or remove the USB memory device to/from the USB port.
- ❖ Do not insert the USB memory device into the USB port close to the rear panel of this machine.

Step 2

2. Tap [Print a document from External Memory].

- ➡ You can also print files by selecting the User Box operation mode and by tapping [System] - [External Memory].

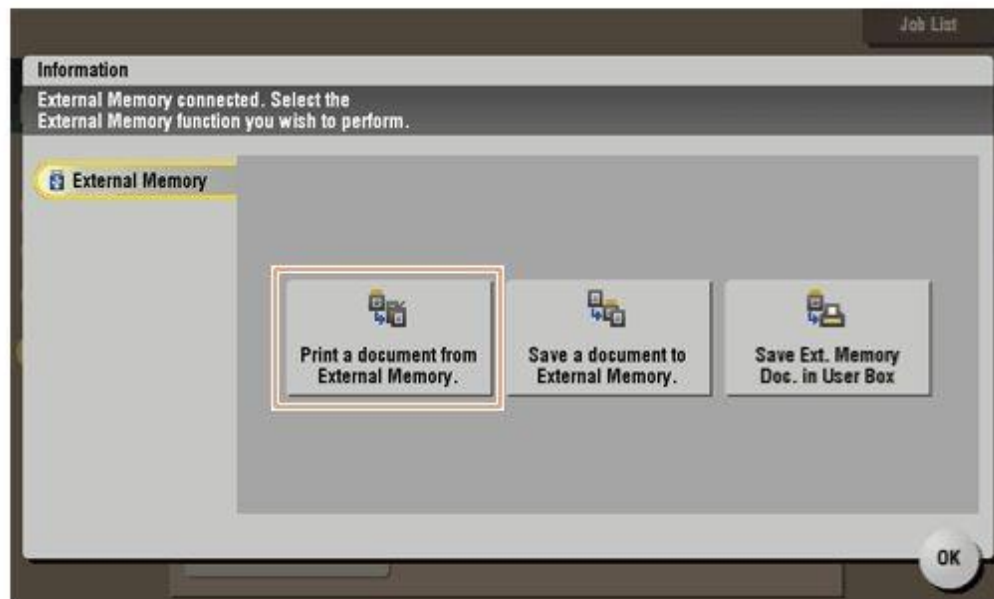

Step 3

3. Select a file to print, then tap [Print].

 
- ➡ You can directly enter the path to the file folder in the [File Path] field.
- ➡ Tap the [Top] key to move upward.
- ➡ Tap the [Open] key to open the folder and move downward.
- ➡ Tap [Details] to display and check the detailed file information.



Step 4

4. Set print options if necessary.

- ➔ You can select a paper size for printing. For details, refer to [Here](#).
- ➔ For detailed optional settings, refer to [Here](#).

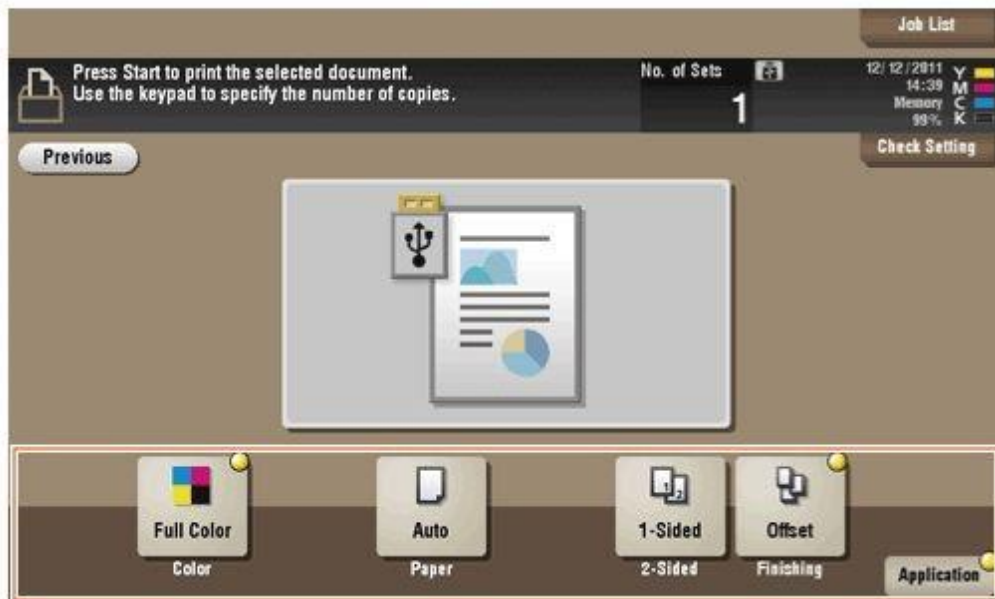

Step 5

5. Press the Start key.

Printing starts.



When Printing is complete it will be safe to remove the USB device