

SOLUTIONS IN TECHNOLOGY

OFFICE EQUIPMENT TELECOMMS IT SERVICES



The correct way to switch off a 4&8 series photocopier.


Below is a picture of the main screen.




The picture below is showing the button to press.



Press the button and then wait till the screen goes out only leaving an orange light on the button you just pressed see picture below.

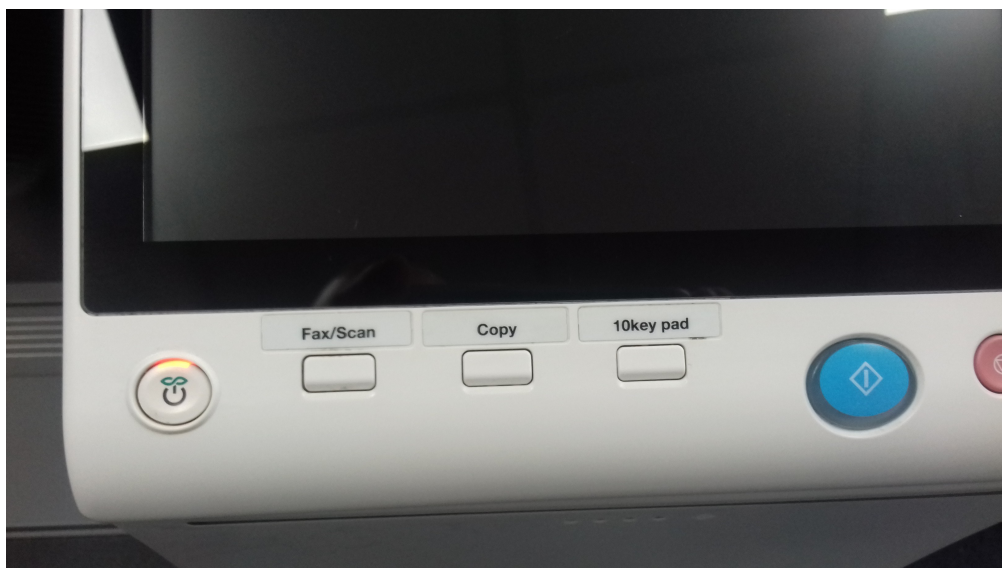

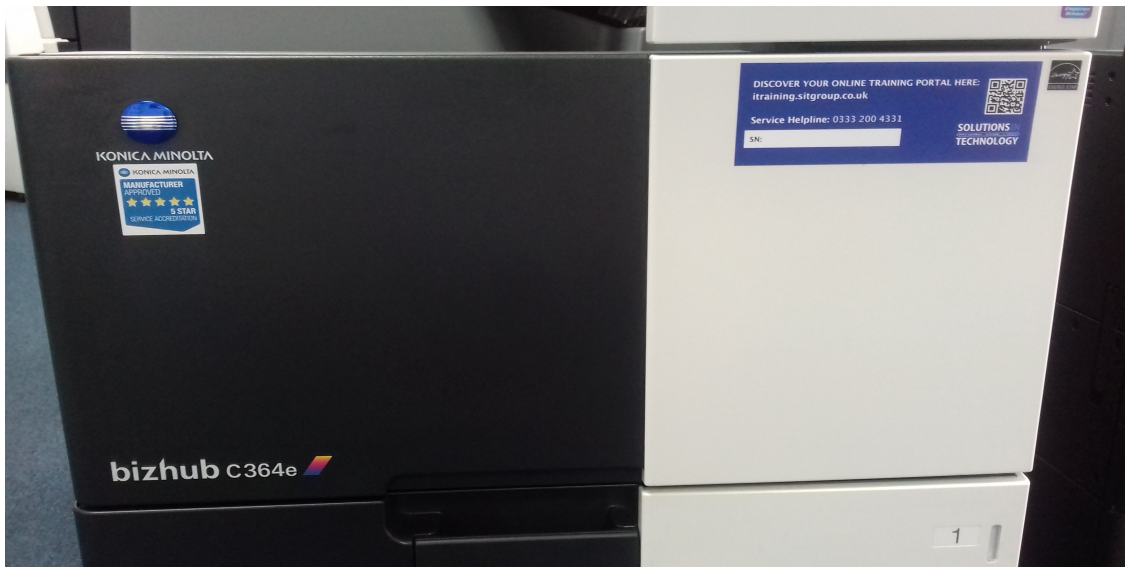

Then open the front door as seen bellow



on the bottom left side is a main switch surrounded by orange.

See picture below for bigger view.



press the switch off and wait till the orange light on
the control panel to go out.
Then Close the door.